



Universal Remote Control Contour TV Device

TV

Acer	3630, 1339, 3539, 1865	Cameron	1523, 3611, 1037, 0
Acoustic Solutions	1667, 1585, 1865, 1523, 2676, 1037	Canox	2676, 1037
Acronn	2561	Carad	1852
AEG	2530, 2457, 2197, 1667, 1556, 1585	Celcus	3648
Agfaphoto	2719	Celestial	2673, 1037
Airis	2561	Centrum	3434, 1037
Aiwa	4542, 3697, 3512, 3434	Changhong	1852
Akai	2676, 3611, 1523, 3067, 3719, 3512, 3810, 0714, 1037, 1865, 4022, 1585, 2197, 0208, 1846, 3528	Chimei	3067
Akira	2289, 3268, 1667, 1770, 1585, 0714, 1846, 2559, 2676, 0668, 1037, 1363, 1556, 1983	CHL	1556
Alba	2676, 1037, 3587, 3810, 0714, 1585, 3005, 3067, 4132, 0668, 1865, 1667, 3964	Cinex	1720
Alien	1037	Clartion	0714
Altus	2663	Clatronic	2676
Amstrad	1667	Clayton	3296
Andersson	2676, 1585, 3719, 0668, 1846, 2799	CMX	2410
Ansonic	2402, 2214, 2111, 0625	Conia	0808
AOC	1846, 1606, 3433, 3262, 2663, 0714	Conrad	3719
Apro	1606	Continental Edison	2531
AquaVision	1606	CPTec	136
Aquivo	3433, 3262, 2663	Crown	071
Argelik	0714	Crypton	020
Ardem	2676	Currys Essentials	248
Arena	0556	Cyberpix	166
Aristona	1037	Daewoo	06
ART	1585, 1667	Daewoo Display	16
Art Mito	1667, 1585, 1865, 1523, 2676, 1037	Dansai	02
AS	1523, 2676, 1037	Dantax	28
Atec	1606	Days	1
Audiola	2799	De Graaf	0
Audiosonic	3067, 0714, 1983	Denver	2
Audiovox	1865	Dew	2
Awa	1667, 2676, 1585, 1037	DEXP	1
Axdia	2719, 2799, 2530, 3512, 2457	Dgtec	1
Axis	2559	Dick Smith	1
Axxion	4155	Electronics	1
Aya	1667, 1585, 3719	Dicra	1
B & O	0620, 1620	Differo	1
Baird	2212, 3090, 2559, 3573, 4142	Digatron	1
Bang & Olufsen	0668, 1037	Digihome	1
Basic Line	2197	Digital Device	1
Bauer	3611, 3648	Digitrex	1
Bauhn	2098, 2530, 1523	Dikom	1
BBK	0714, 2125, 3433	DL	1
Beko	3267, 2663, 0808	DMTech	1
		DNS	1
		Doffler	1
		dVision	1
		Domeos	1
		Donghai	1
		DSE	1
		Dual	1
		Dunlop	1
		Durabase	1
		Durabrand	1
		D-Vison	1
		DW Display	1

Code List TV

- EN Code List
- DE Codeliste
- FR liste des codes
- ES Lista de Códigos
- IT Elenco dei codici
- NL Codelijst
- DA Kodliste
- NO Kodlista
- SV Bruksanvisning
- FI koodiluettelon
- EL λίστα κώδικα
- RU список кодов
- TR Kod listesi
- PL Lista kodów
- CZ seznam kódů
- HU kódlista
- SK zoznam kódov
- HR Kod popis
- RO lista de coduri
- BG Код списък



1

Code List

Aiwa

2

(3 sec.)

x2

3

(Aiwa)

x2

4

OFF

TV			
Acer	3630, 1339, 3539, 1865	Cameron	1523, 3611, 1037, 0668, 3719, 1865, 1523, 2676, 1037, 18
Acoustic Solutions	1667, 1585, 1865, 1523, 2676, 1037	Canox	2676, 1037, 3434, 3296, 36
Acronn	2561	Celcus	3648
AEG	2530, 2457, 2197, 1667, 1556, 1585	Celestial	2673, 1037, 1852, 1666
Agfaphoto	2719	Centrum	3434, 3296, 36
Airis	2561	Changhong	1852, 1666
Aiwa	4542, 3697, 3512, 3434	Chimei	3067
Akai	2676, 3611, 1523, 3067, 3719, 3512	CHL	1556
		Cinex	1720
		Clartion	0714
		Clatronic	2676
		Clayton	3296
		CMX	2410
		Conia	0808
		Conrad	3719
		Continental Edison	2531
		CPTec	136
		Crown	071
		Crypton	020
		Currys Essentials	248
		Cyberpix	166
		Daewoo	06
		Daewoo Display	16
		Dansai	02
		Dantax	28
		Days	1
		De Graaf	0
		Denver	2
		Dew	2
		DEXP	1
		Dgtec	1
		Dick Smith	1
		Electronics	1
		Dicra	1
		Differo	1
		Digatron	1
		Digihome	1
		Digital Device	1
		Digitrex	1
		Dikom	1
		DL	1
		DMTech	1
		DNS	1
		Doffler	1
		dVision	1
		Domeos	1
		Donghai	1
		DSE	1
		Dual	1
		Dunlop	1
		Durabase	1
		Durabrand	1
		D-Vison	1
		DW Display	1

