 


# DALI KATCH

MANUAL



IN ADMIRATION OF MUSIC



## CONTENTS

|   |          |  |           |
|---|----------|--|-----------|
| <b>1.0 Unpacking</b> . . . . .                              | <b>3</b> | 6.3 Bluetooth Release . . . . .                                | 11        |
| <b>2.0 DALI KATCH Buttons<br/>And Connections</b> . . . . . | <b>4</b> | 6.4 Bluetooth Naming . . . . .                                 | 11        |
| 2.1 DALI KATCH Button Overview . . . . .                    | 4        | 6.5 Stereo Pair Mode . . . . .                                 | 12        |
| 2.2 DALI KATCH Connector Overview . . . . .                 | 5        | <b>7.0 Sound Mode</b> . . . . .                                | <b>13</b> |
| <b>3.0 Power On/Off</b> . . . . .                           | <b>6</b> | <b>8.0 Connections</b> . . . . .                               | <b>14</b> |
| 3.1 Power On . . . . .                                      | 6        | 8.1 USB Charge (Connector 1) . . . . .                         | 14        |
| 3.2 Power Off . . . . .                                     | 6        | 8.2 Stereo Mini-Jack (Connector 2) . . . . .                   | 14        |
| <b>4.0 Volume Up/Down</b> . . . . .                         | <b>7</b> | <b>9.0 Strap Extension</b> . . . . .                           | <b>15</b> |
| 4.1 Volume Down . . . . .                                   | 7        | <b>10.0 Positioning</b> . . . . .                              | <b>16</b> |
| 4.2 Volume Up . . . . .                                     | 7        | <b>11.0 Factory Reset &amp;<br/>Firmware Upgrade</b> . . . . . | <b>17</b> |
| 4.3 Volume Indications . . . . .                            | 7        | 11.1 Factory Reset . . . . .                                   | 17        |
| <b>5.0 Charging</b> . . . . .                               | <b>8</b> | 11.2 Firmware Upgrade . . . . .                                | 17        |
| <b>6.0 Bluetooth</b> . . . . .                              | <b>9</b> | <b>12.0 Cleaning</b> . . . . .                                 | <b>18</b> |
| 6.1 Pairing . . . . .                                       | 9        | <b>13.0 Disposal</b> . . . . .                                 | <b>19</b> |
| 6.2 NFC Pairing . . . . .                                   | 10       |  |           |



## 1.0 UNPACKING



Be careful not to damage the contents when unpacking the parts. Check that all parts are included in the cardboard box. Keep the packaging materials in case your speaker needs to be relocated or serviced.




IN ADMIRATION OF MUSIC




## 2.0 DALI KATCH BUTTONS AND CONNECTIONS

### 2.1 DALI KATCH BUTTON OVERVIEW

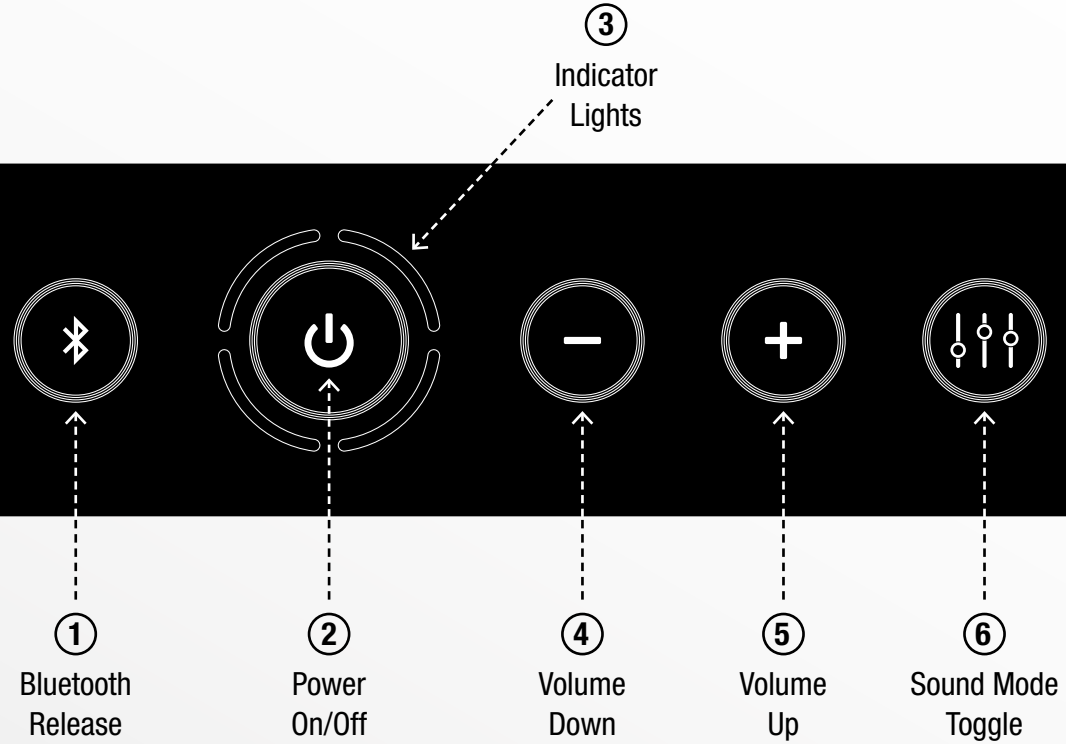

## 2.0 DALI KATCH BUTTONS AND CONNECTIONS

### 2.2 DALI KATCH CONNECTOR OVERVIEW

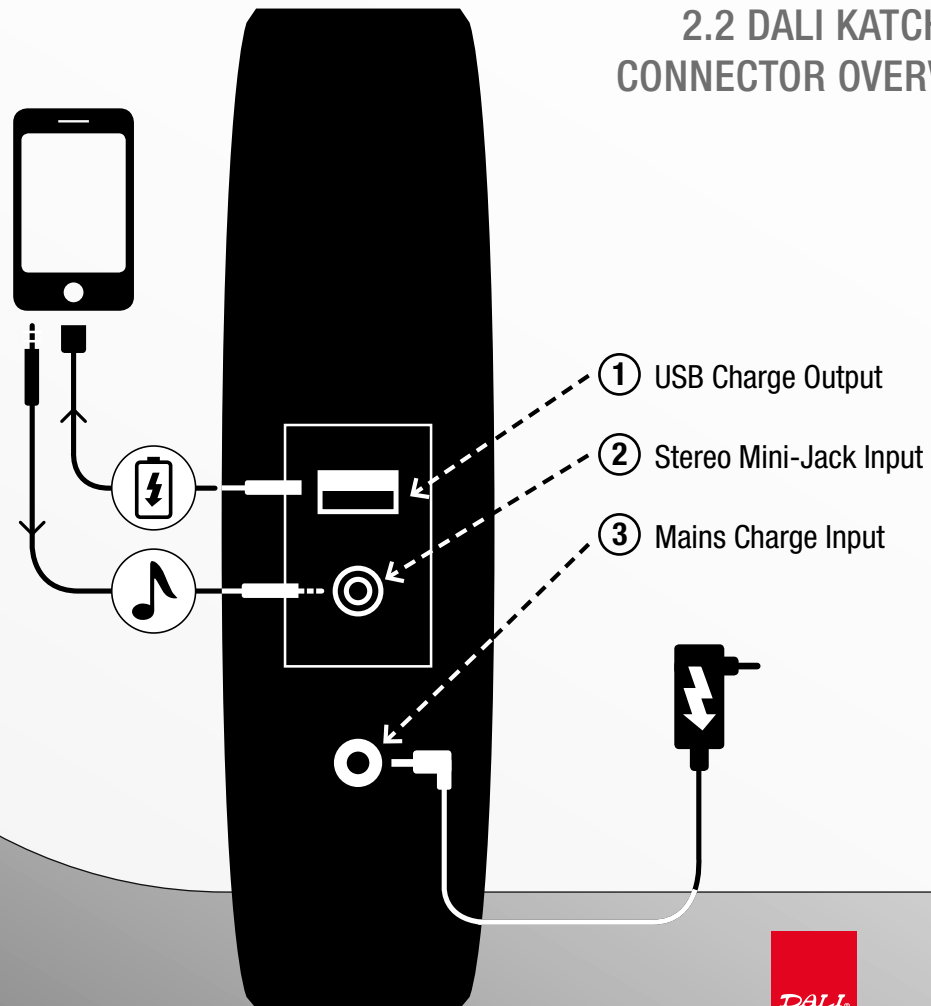


## 3.0 POWER ON/OFF

### 3.1 POWER ON

To turn ON the DALI KATCH:

1. Press and hold the Power On/Off button (Button 2) until the power on sound is played.
2. The indicator light (Button 3) is illuminated, and the KATCH is ready for use.

When the DALI KATCH is on, the indicator lights (Button 3) show the status of the battery.

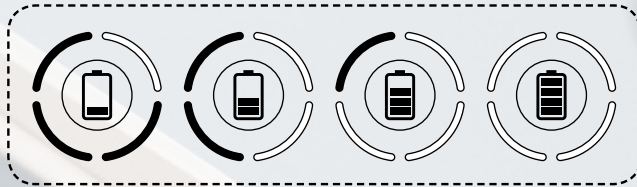

If your DALI KATCH does not turn on, connect the mains charger (See 4.0)

### 3.2 POWER OFF

To turn OFF the DALI KATCH:

1. Press and hold Power On/Off button (Button 2) until the power off sound is played.
2. The indicator light is turned off, unless the DALI KATCH is connected to mains power (See 5.0).

The DALI KATCH will automatically turn off if not used. When running on the battery, auto power off is initiated after 10 minutes. When connected to mains power, auto power off is initiated after 30 minutes.



## 4.0 VOLUME UP/DOWN

### 4.1 VOLUME DOWN

To turn down the volume on the DALI KATCH:

1. Press the Volume Down button (Button 4).

To quickly turn down the volume, press and hold the Volume Down button (Button 4).

### 4.2 VOLUME UP


To turn up the volume on the DALI KATCH:

1. Press the Volume Up button (Button 5).

To quickly turn up the volume, press and hold the Volume Up button (Button 5).


### 4.3 VOLUME INDICATIONS

The indicator lights (Button 3) will indicate the volume setting.

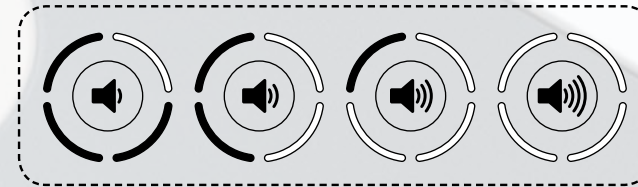

## 5.0 CHARGING

To charge the DALI KATCH, connect the included mains charger to the DALI KATCH (Connector 3) and charging will begin. While charging the indicator lights (Button 3) will slowly pulsate while showing the charge state. A full charge will take up to 2 hours. Playing music or using the USB charge (Connector 1) will increase charge time.

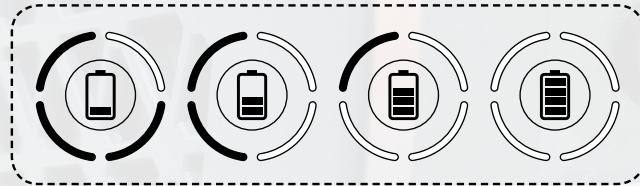

On a full charge, the DALI KATCH will play for up to 24 hours.

Powering the DALI KATCH through the mains charger will enable it to play louder and with more energy. This can be recommended for optimal performance when playing loud party music.





## 6.0 BLUETOOTH

### 6.1 PAIRING

To connect your device to the DALI KATCH:

1. Turn on the DALI KATCH (See 3.1).
2. The DALI KATCH is now ready for a Bluetooth pairing.
3. Initiate the Bluetooth pairing process from your device.
4. When the pairing is complete, the Bluetooth pairing sound is played and the indicator lights (Button 3) turns blue.

If a device has been paired to the DALI KATCH earlier, and is within range, the DALI KATCH will automatically reconnect to that device.

It is possible to have two devices connected to the DALI KATCH at the same time. Both devices can play audio, but only one at a time via the DALI KATCH.




## 6.0 BLUETOOTH

### 6.2 NFC PAIRING

NFC can also be used to initiate the Bluetooth pairing.

1. Turn on the DALI KATCH (See 3.1).
2. Make sure that NFC is turned on in your device.
3. Locate the NFC sensing area on your phone.
4. Hold the NFC sensing area on the device close to the side of the DALI KATCH right next to the Power On/Off button (Button 2), as shown on the illustration.

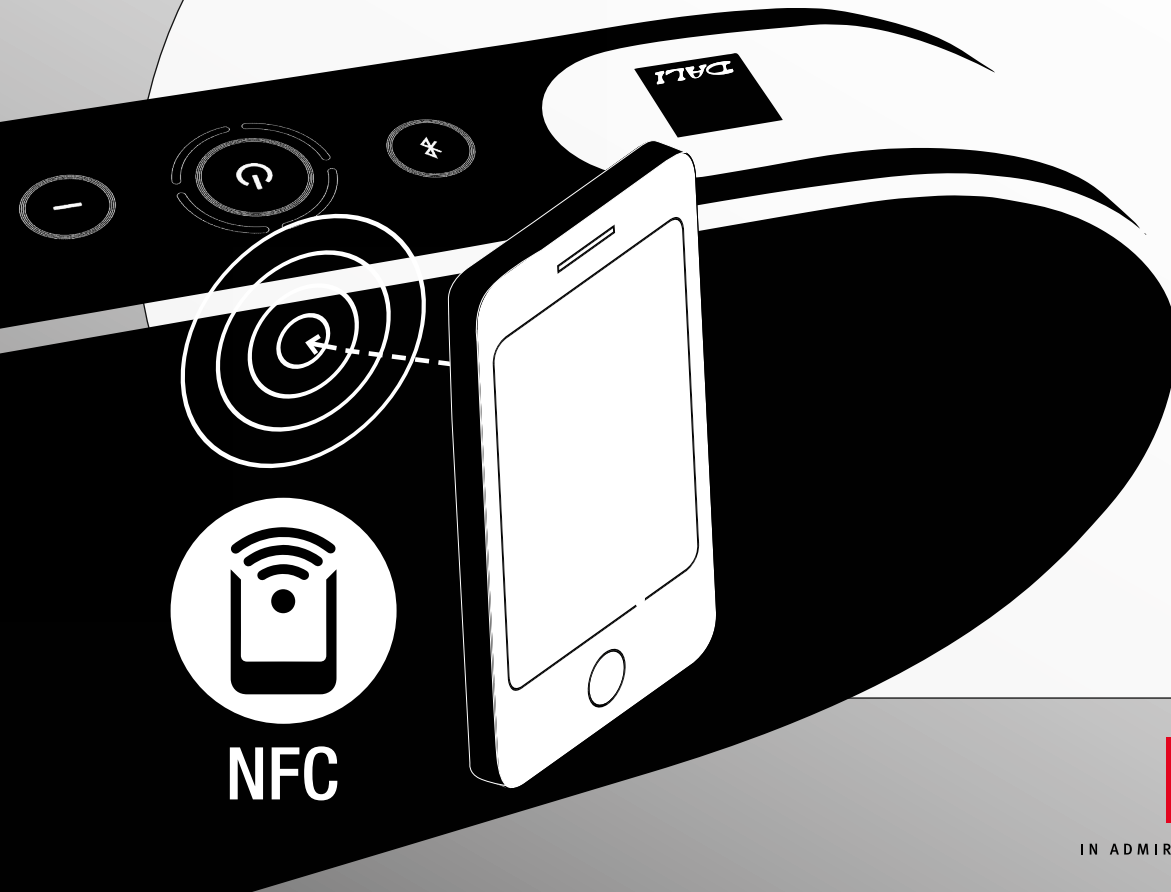

## 6.0 BLUETOOTH

### 6.3 BLUETOOTH RELEASE


If you are unable to pair your device to the DALI KATCH:

1. Press and hold the Bluetooth release button (Button 1) until the Bluetooth release sound plays and the indicator light turns blue.
2. All connected devices are now released and you can re-engage the pairing.

### 6.4 BLUETOOTH NAMING

If you have more than one DALI KATCH, it is possible to change the Bluetooth name of your DALI KATCH.

1. Turn off the DALI KATCH (See 3.2).
2. Press and hold the Power On/Off button (Button 2).
3. When the power on sound is played, keep holding the Power On/Off button (Button 2), and...
4. Press either Volume Up (Button 5) or Volume Down (Button 4) to circle through the possible names (DALI KATCH, DALI KATCH 1, DALI KATCH 2 and DALI KATCH 3).

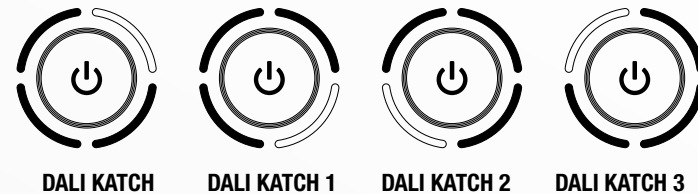

## 6.0 BLUETOOTH

### 6.5 STEREO PAIR MODE

It is possible to connect two DALI KATCH to form a stereo pair, playing left and right channels respectively.

To initiate the stereo connection:

1. Turn on the first DALI KATCH and pair it with a device (See 6.1). This speaker will play the left channel when the setup is complete.
2. Press the Bluetooth Release button (Button 1) and the Volume Up (Button 5), on the first DALI KATCH, at the same time, and hold until the indicator lights (Button 3) start blinking white and blue.
3. Turn on the second DALI KATCH and wait for about 5 seconds.

4. Press the Bluetooth Release button (Button 1) and the Volume Up (Button 5), on the second DALI KATCH, at the same time, and hold until the indicator lights (Button 3) start blinking white and blue.
5. The two DALI KATCH will now connect to each other (This may take up to 15 seconds).

When the connection is established the Bluetooth connect sound is played from both speakers and the indicator lights (Button 3) will turn white on the left DALI KATCH and blue on the right DALI KATCH.


The volume will automatically be synchronised between the two units when using volume up/down on either unit.

The two units will stay connected in Stereo Pair Mode until the connection is manually released.

To exit Stereo Pair Mode:

1. Press and hold the Bluetooth release button (Button 1) on either of the two DALI KATCH's until the Bluetooth release sound plays.


When paired in stereo mode, it is only possible to connect one device at a time to the DALI KATCH.

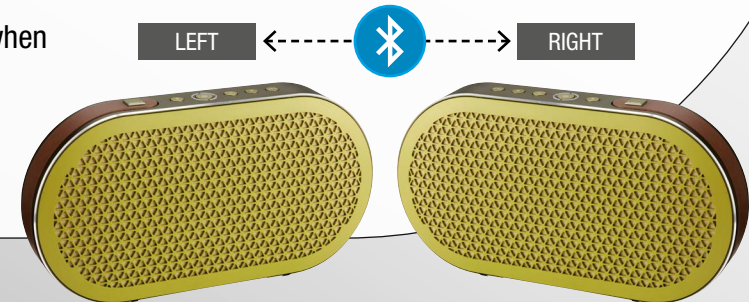

## 7.0 SOUND MODE

The DALI KATCH has two sound modes, Clear and Warm. To toggle between the two sound modes press the 'Sound Mode' toggle button (Button 6).

Be aware that when using the Stereo Pair Mode (See 6.5) the sound mode needs to be adjusted manually on both units.

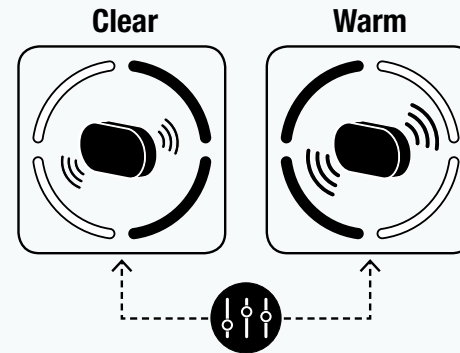



## 8.0 CONNECTIONS

### 8.1 USB CHARGE (CONNECTOR 1)

The USB charge port delivers 5V/1A, making it possible to charge most devices directly from the DALI KATCH. The USB Charge port will also power a Google Chromecast Audio dongle, adding the ability to integrate the DALI KATCH with your home network.

Music playback via the USB Charge port is not available.

 
### 8.2 STEREO MINI-JACK (CONNECTOR 2)

Connect any non-Bluetooth device to the DALI KATCH using a stereo mini-jack cable. When inserting a mini-jack into the connector the DALI KATCH automatically activates the mini-jack input, stopping any Bluetooth playback. To return the DALI KATCH to Bluetooth playback, unplug the mini-jack or press the Bluetooth release button (Button 1). When a mini-jack is plugged into the DALI KATCH, the Bluetooth release button (Button 1) will act as a Source Select Toggle.



## 9.0 STRAP EXTENSION

The leather strap on the side of the DALI KATCH can be extended to act as a carry strap. By using your thumb to push and release the strap lock on the bottom of the DALI KATCH you can lock the strap in the extended position. The reverse manoeuvre will lock the strap back in place.

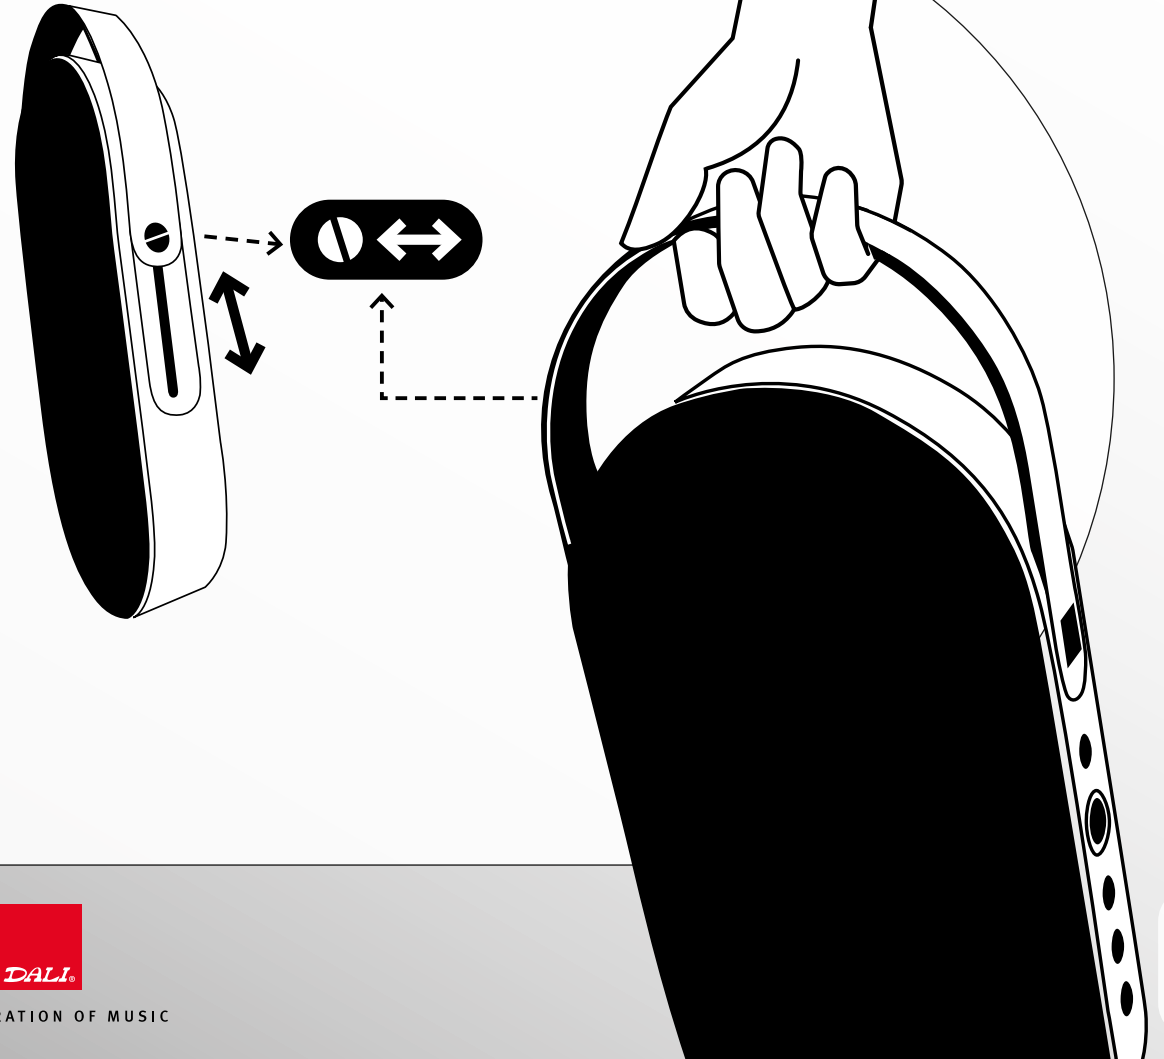


IN ADMIRATION OF MUSIC



## 10.0 POSITIONING

The DALI KATCH is designed to deliver the best possible sound experience in all positions. Your choice of position will reflect on the sound, eg. placing the DALI KATCH close to a wall can increase the experienced bass level.

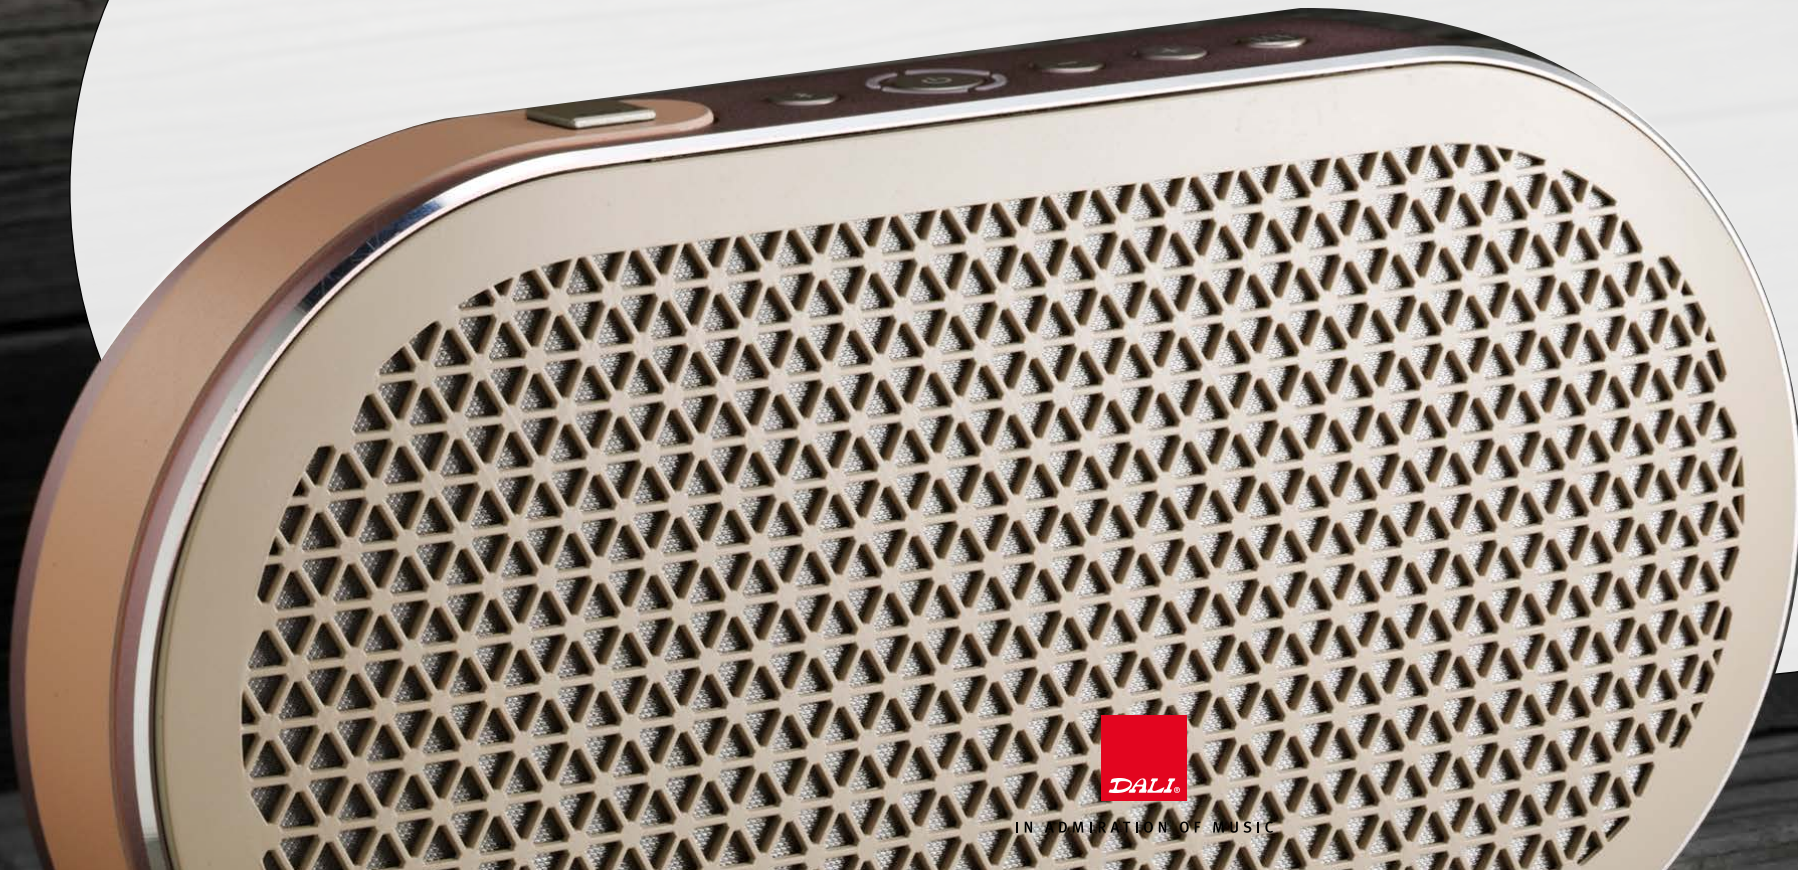

IN ADMIRATION OF MUSIC





## 11.0 FACTORY RESET & FIRMWARE UPGRADE

### 11.1 FACTORY RESET

To reset the DALI KATCH to the factory state:

1. Stop any playback to the DALI KATCH
2. Turn off the DALI KATCH (See 3.2)
3. Press and hold the Sound Mode toggle button (Button 6) and press the Power On/Off button (Button 2) until the indicator lights (Button 3) turn on, one by one.
4. Wait for about 10 seconds
5. Turn off the DALI KATCH (See 3.2)
6. The unit is now reset.

### 11.2 FIRMWARE UPGRADE

Place the firmware file on a USB memory stick. The file will need to be in the root directory, and must be named `katch.hex`. Insert the USB memory stick into the USB charge connector (Connector 1) and execute point 1 – 4 of the factory reset (See 11.1).

All the indicator lights (Button 3) turn on, the firmware update sound is played and the DALI KATCH turns off by itself. After the reset the firmware is upgraded.

Look for new firmware here:



[www.dali-katch.com](http://www.dali-katch.com)



## 12.0 CLEANING

Clean the cabinet with a soft, dry cloth. If the cabinet is dirty, wipe with a soft cloth dipped in all-purpose cleaner and then well wrung out. As this is product contains electronics, be careful not to get it wet, and keep it clear of water.



The travel bag can be washed by gently hand washing in lukewarm water without the use of fabric cleaner.



IN ADMIRATION OF MUSIC



## 13.0 DISPOSAL

If you want to dispose of this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling. Private households in the EU member states, Switzerland, Liechtenstein and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

If you reside in countries not mentioned above, please contact your local authorities for the correct method of disposal. By following this process, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.

